




## GOVERNOR

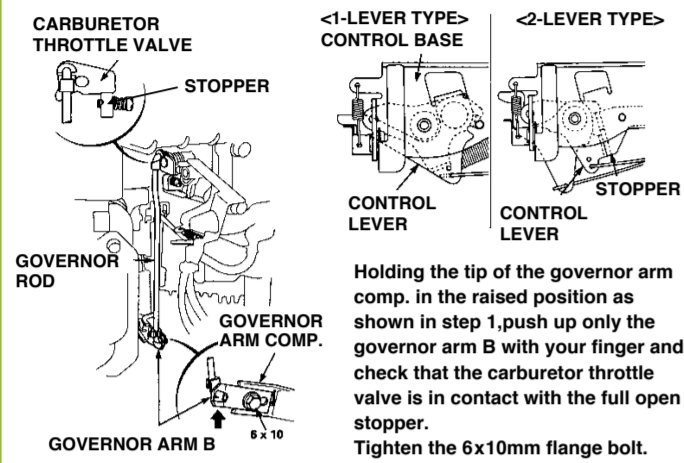



## VALVE CLEARANCE

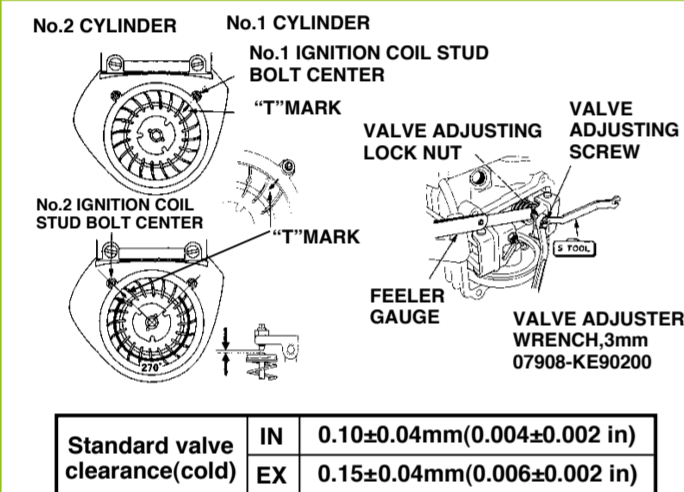

## IGNITION COIL AIR GAP

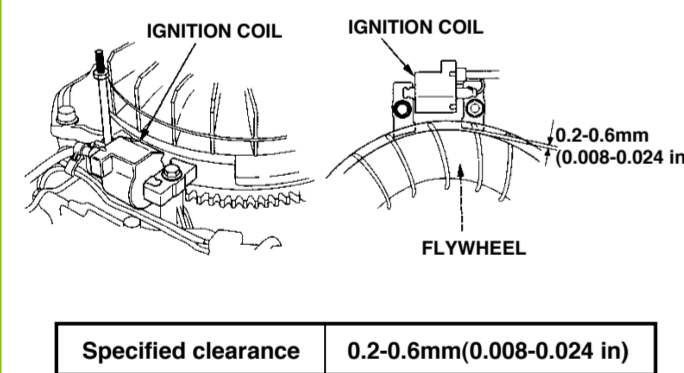


Gasoline is highly flammable and explosive. Check to see whether the fuel is not leaking from the fuel system parts.

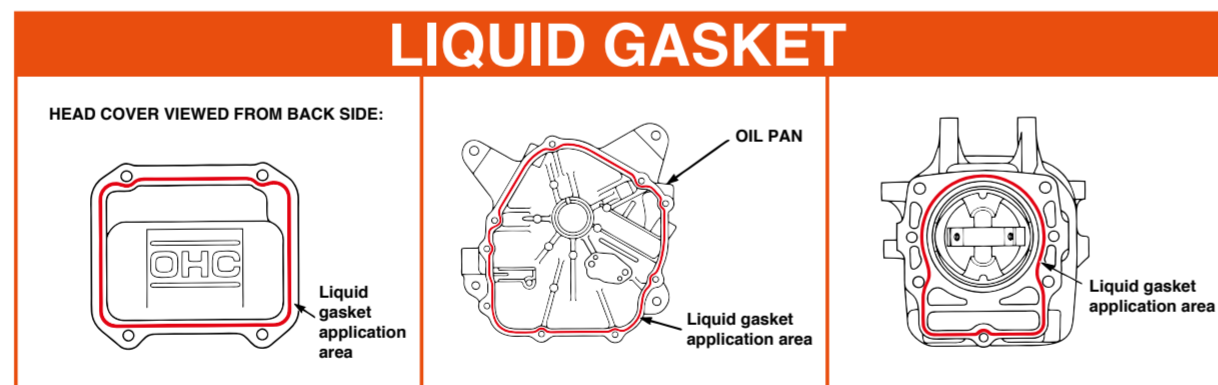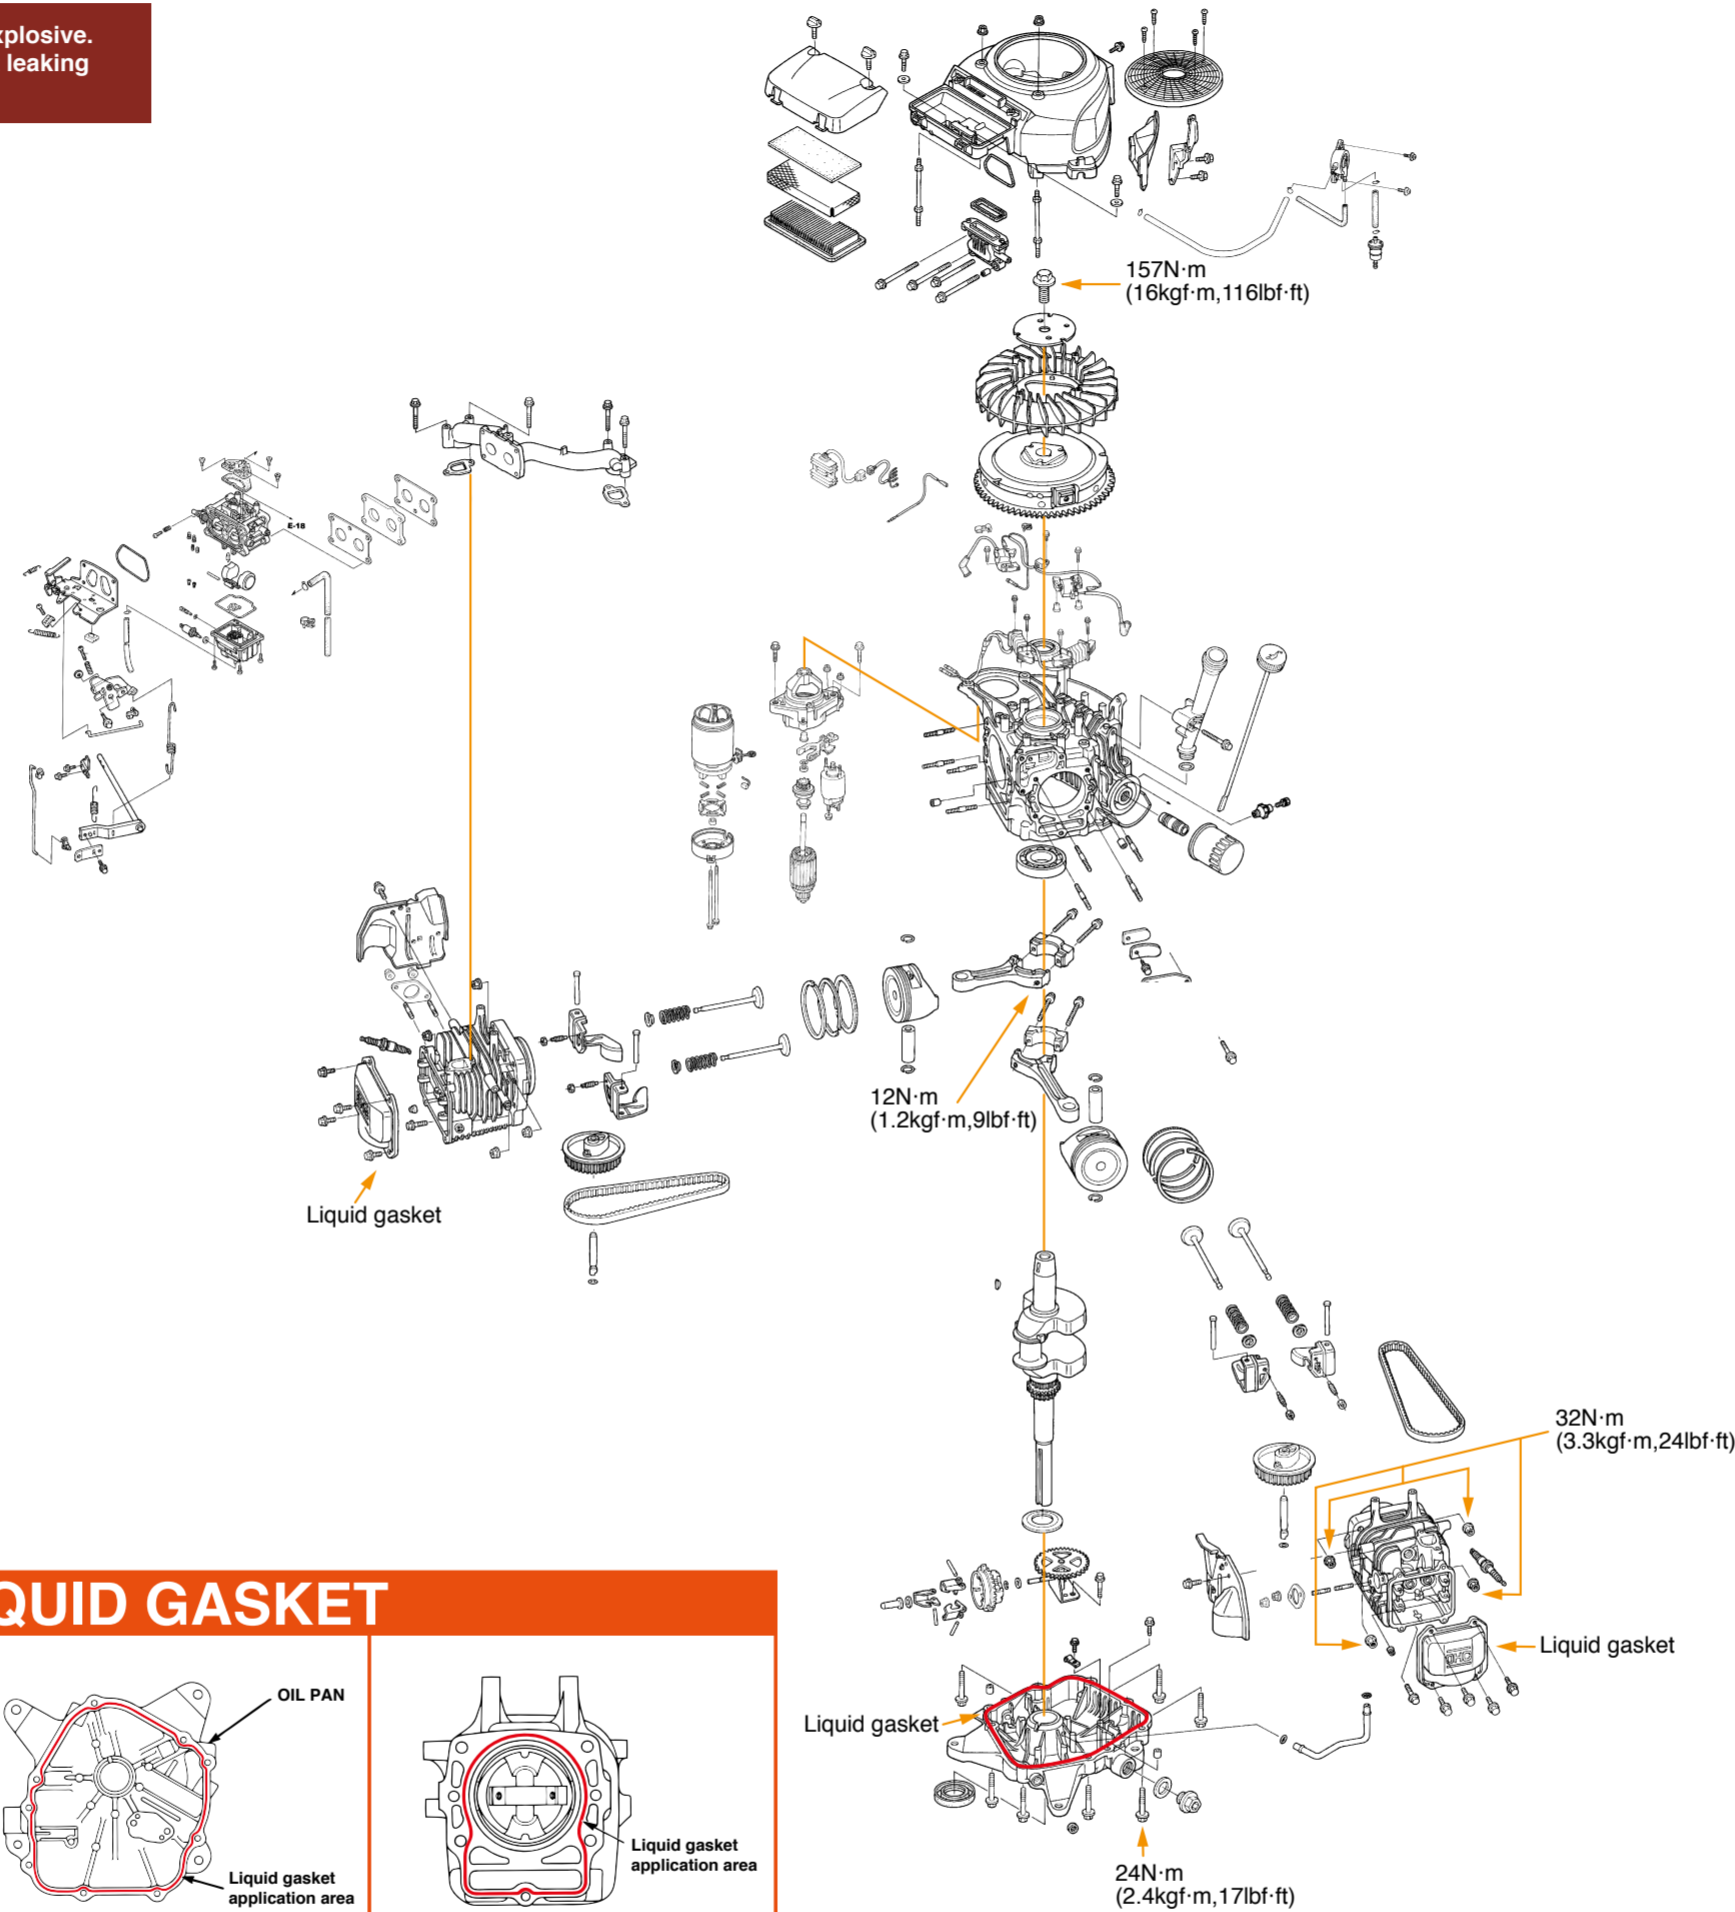


© Honda Motor Co., Ltd. Power Product Service Division.


## ENGINE OIL

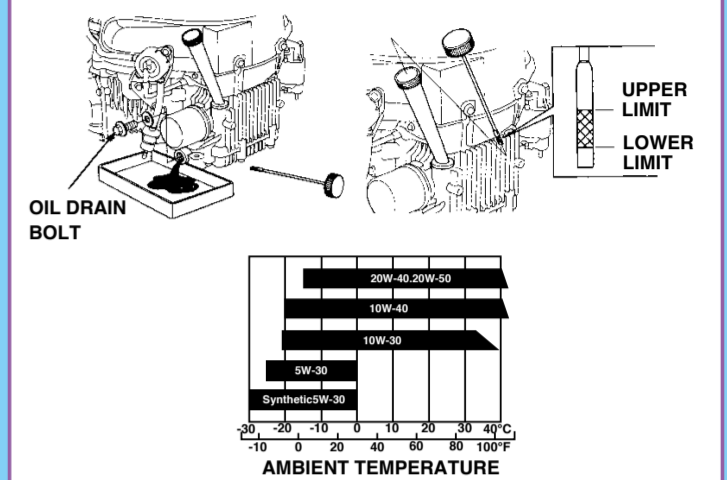


## AIR CLEANER

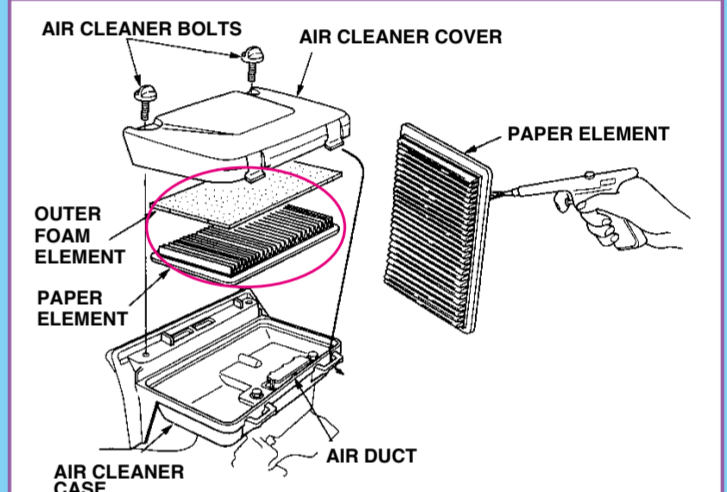


## SPARK PLUG

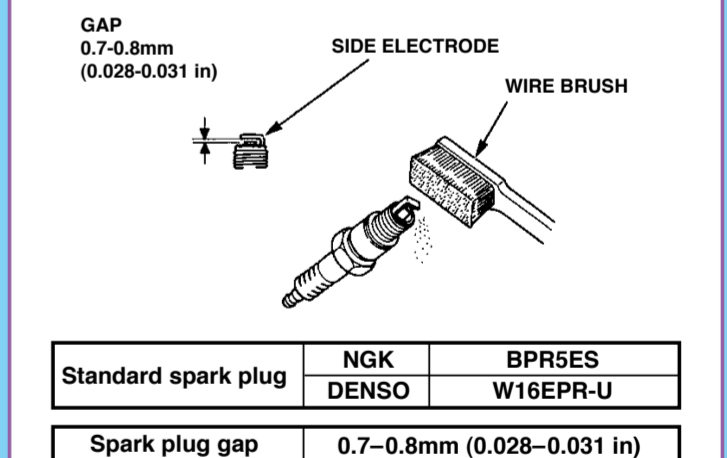


## PISTON DISASSEMBLY/REASSEMBLY

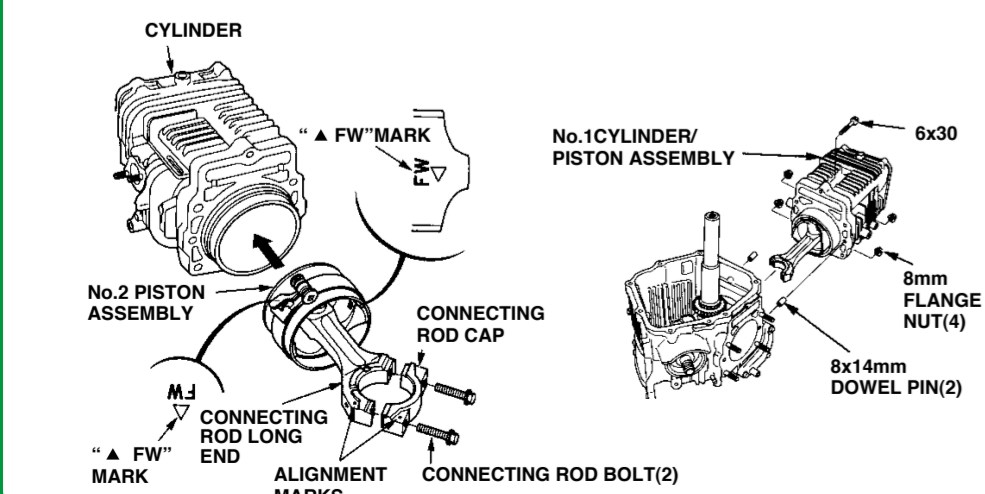

## CAMSHAFT

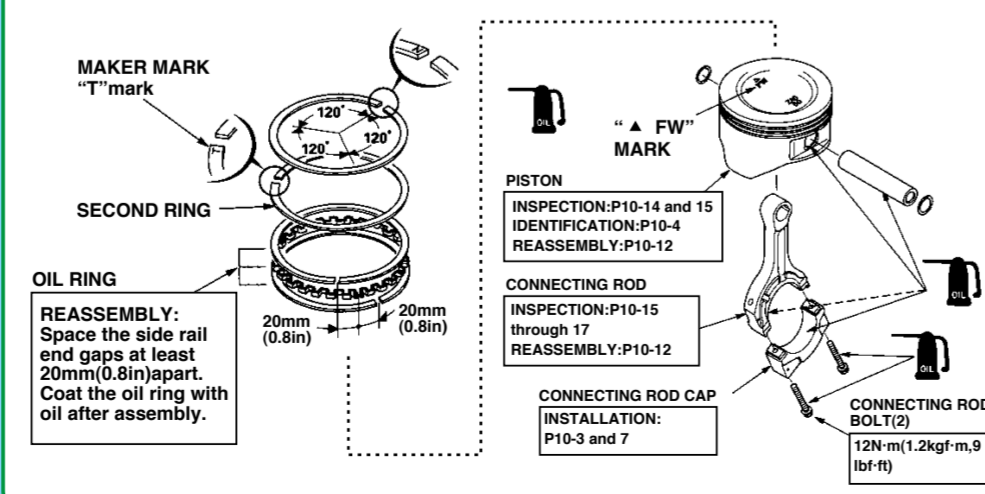

## CARBURETOR DISASSEMBLY/REASSEMBLY

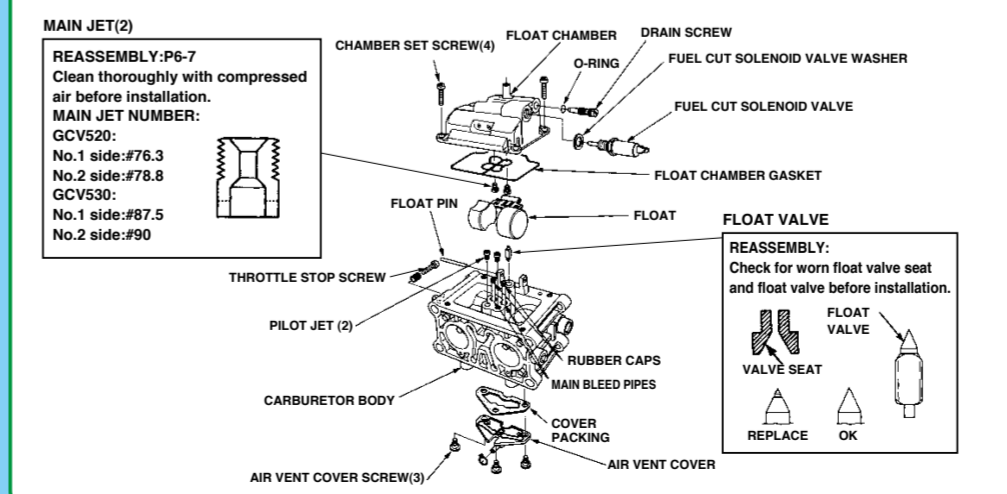

## CARBURETOR REMOVAL/INSTALLATION

