
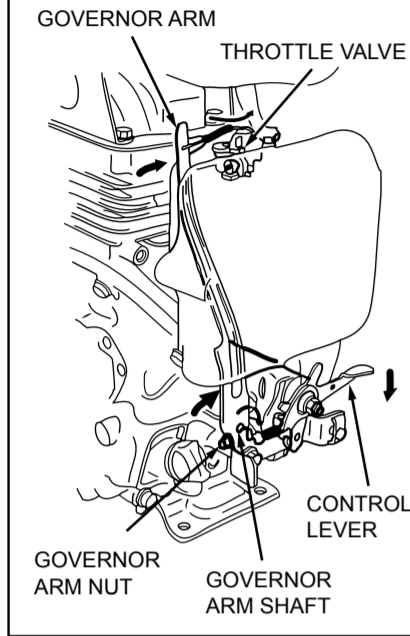


GOVERNOR

ADJUSTMENT

- 1) Move the control lever to the "FAST" position.
- 2) Loosen the governor arm nut on the governor arm.
- 3) Push the governor arm end toward the carburetor side, open the carburetor throttle valve fully.
- 4) Holding the carburetor throttle valve fully opened, turn the governor arm shaft clockwise fully, and tighten the governor arm nut to the specified torque. (TORQUE : 10 N · m)
- 5) Check to see whether the governor arm and the carburetor throttle valve operate smoothly.
- 6) Start the engine and allow it to warm up to the normal operating temperature. Move the control lever to the maximum engine speed position and check the maximum engine speed.
- 7) Adjust the maximum engine speed, if necessary, by turning the adjusting screw in or out.

Maximum engine speed (no load)
4,000 ± 200 min⁻¹ (rpm)

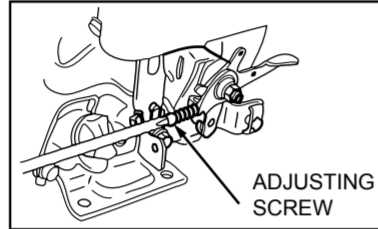


VALVE CLEARANCE

Valve clearance inspection and adjustment must be performed with the engine cold.
Remove the cylinder head cover, and set the piston at the top dead center of the compression stroke (both valves fully closed). Align the cutout in the flywheel fin or the alignment mark on the flywheel with the top hole on the fan cover.

Insert a feeler gauge between the valve adjusting screw and the valve to measure valve clearance.


VALVE CLEARANCE	0.15 ± 0.04 mm (IN)	0.20 ± 0.04 mm (EX)
-----------------	---------------------	---------------------

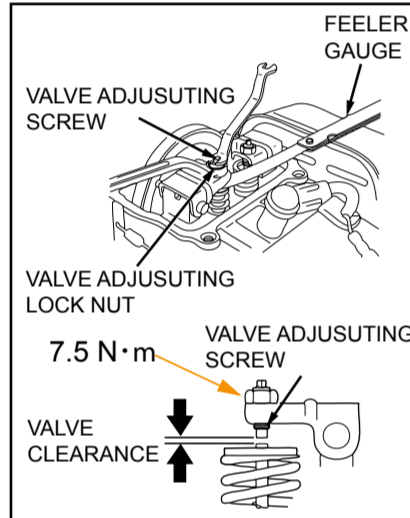

IGNITION COIL

INSPECTION

PRIMARY SIDE	SECONDARY SIDE
<p>Primary side resistance value 0.75-0.95Ω</p>	<p>Secondary side resistance value 6.1-9.3 kΩ</p>

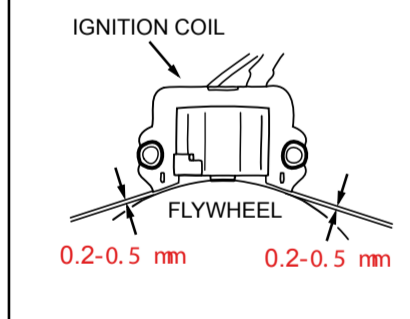

PISTON DISASSEMBLY/REASSEMBLY

Install all rings with the markings facing up. Space the piston ring end gaps 120° apart.

Do not align the end gap of the clip with the cutout in the piston pin bore.

CAM PULLEY INSTALLATION

Set the piston top dead center of the compression stroke (both valves fully closed). Align the cutout in the flywheel fin or the alignment mark on the flywheel with the top hole on the fan cover.

Align the alignment marks on the cam pulley so that they are in line with the head cover mating surface. Be careful to avoid turning the crankshaft when installing.

Gasoline is highly flammable and explosive. Check to see whether the fuel is not leaking from the fuel system parts.

7.5 N·m, 7.5 N·m, 18 N·m, 18 N·m, 1 N·m, 10 N·m, 7 N·m, 2.3 N·m, 7 N·m, 42 N·m, 5 N·m

Do not reuse

Cleaning

FUEL TUBE
Check the fuel tube for deterioration, cracks and gasoline leakage.

Remove carbon deposits by lightly tapping the outer flange with a plastic hammer before installation.

© Honda Motor Co., Ltd. Power Product Service Division.

ENGINE OIL

Engine oil capacity	0.40 L (0.42 rtUS qt, 0.35 Imp qt)
Recommended oil	SAE 10W-30 API Service Classification SF or SG

LIQUID GASKET

HEAD COVER CYLINDER BARREL

ThreeBond 1207B or equivalent
· Assemble within 10 minutes after applying the liquid gasket.
· Wait for 20 minutes after assembly. Do not add oil or start the engine during this period.

SPARK PLUG

Spark plug gap	0.6 - 0.7 mm (0.024 - 0.028 in)	
Recommended Spark plug	NGK CR5HSB	DENSO U16FSR-UB

ENGINE STOP SWITCH

Attach the tester leads to the black wire and the ground plate of the engine stop switch, and check continuity.

Switch OFF position : There should be continuity.
Switch ON position : There should be no continuity.

OIL ALERT

	BLACK	YELLOW	BODY
BLACK	∞	500-10kΩ	∞
YELLOW	500-10kΩ	∞	∞
BODY	∞	∞	∞

CARBURETOR

IDLE SPEED ADJUSTMENT

- Start the engine and allow it warm up to normal operating temperature.
- With the engine idling, turn the throttle stop screw in or out to obtain the standard idle speed.

Standard idle speed
1,550 ± 150 min⁻¹ (rpm)

REMOVAL INSTALLATION

Install in the direction shown.
Do not reuse. Install in the direction shown.

CLEANING

Clean the body and passage by spraying carburetor cleaner before installation.